

Components:

#130-21	Cup, Stainless Steel
#130-24	Caution and Voltage Panel Plate
#130-25	Heating Element, 115 Volt, 150 Watt
#130-31	Thermostat, 50 - 300°F
#164-32	Male Connector, 230 Volt
#165-40-2	Cable, 18GA, 3-Conductor, for 230 Volt
#170-09	Insulation Board
#170-10	Thermostat Pilot Light
#171-32	Midget Knob
#171-82	Power Cord with Male Plug, 8 foot, 115 Volt

OFI Testing Equipment, Inc.

11302 Steeplecrest Dr. Houston, Texas 77065 U.S.A.
Tele: 832.320.7300 or 877.837.8683
Fax: 713.880.9886 www.ofite.com

©Copyright OFITE 2015


Components

#130-21	Cup, Stainless Steel
#130-24	Caution and Voltage Panel Plate
#130-25	Heating Element, 115 Volt, 150 Watt
#130-31	Thermostat, 50 - 300°F
#164-32	Male Connector, 230 Volt
#165-40-2	Cable, 18GA, 3-Conductor, for 230 Volt
#170-09	Insulation Board
#170-10	Thermostat Pilot Light
#171-32	Midget Knob
#171-82	Power Cord with Male Plug, 8 foot, 115 Volt

OFI Testing Equipment, Inc.

11302 Steeplecrest Dr. Houston, Texas 77065 U.S.A.
Tele: 832.320.7300 or 877.837.8683
Fax: 713.880.9886 www.ofite.com

©Copyright OFITE 2015

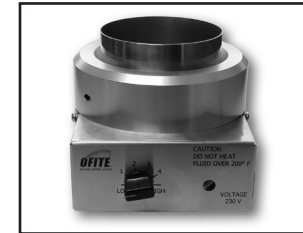

Cup Heater with Stainless Steel Cup

No. 130-20 - 115 Volt

No. 130-30 - 230 Volt

Instruction Manual

Updated 09/23/2015

Ver. 2.0

OFI Testing Equipment, Inc.



Cup Heater with Stainless Steel Cup

No. 130-20 - 115 Volt

No. 130-30 - 230 Volt

Instruction Manual

Updated 09/23/2015

Ver. 2.0

OFI Testing Equipment, Inc.

Introduction:

Cup heaters are designed for controlling temperature of a mud sample while taking readings with a rheometer or viscometer. Drilling mud has a low thermal conductivity, so the mud must be agitated in order to reach a uniform temperature within a reasonable time.

Caution:

1. Do not leave viscometer rotor immersed for long periods in the mud as vapors will travel up into the bearings and condense, causing corrosion.
2. Do not heat fluid over 200°F.
3. Do not immerse cup heater in water when cleaning.

Introduction:


Cup heaters are designed for controlling temperature of a mud sample while taking readings with a rheometer or viscometer. Drilling mud has a low thermal conductivity, so the mud must be agitated in order to reach a uniform temperature within a reasonable time.

Caution:

1. Do not leave viscometer rotor immersed for long periods in the mud as vapors will travel up into the bearings and condense, causing corrosion.
2. Do not heat fluid over 200°F.
3. Do not immerse cup heater in water when cleaning.

Procedure:


1. Plug the cord into 115 or 230 volts AC as indicated on the nameplate (#130-20 is 115 V, #130-30 is 230 V).
2. Turn the thermostat clockwise to about three-fourths of the range, which will be 185°F, and allow 15 minutes for heat-up. The pilot light will light when the well reaches the set temperature.
3. Place an OFITE #154-00 or #154-10 Thermometer in provided thermometer hole on the side of the well to read well temperature. The thermostat should be set about 50°F above desired mud temperature.
4. With the well pre-heated, place the cup of mud in the well. Stir mud frequently, checking also with a thermometer. When the mud approaches the desired temperature, cut the thermostat back about ¼ turn to avoid overheating.
5. Place entire assembly on base of OFITE Viscometer or Rheometer. The holes in the shelf of the OFITE Viscometer have been relocated to hold the cup heater at 45° to the line of the instrument for better accommodation (see picture to right).

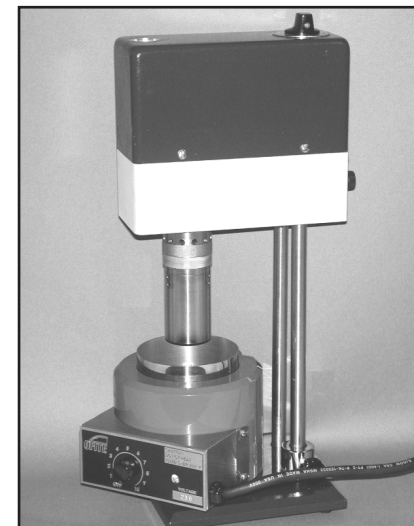

6. Raise or lower instrument to proper depth and stir. Recheck temperature and take reading. Adjustment of temperature may be needed if instrument bob and rotor are cold.

Procedure:

1. Plug the cord into 115 or 230 volts AC as indicated on the nameplate (#130-20 is 115 V, #130-30 is 230 V).
2. Turn the thermostat clockwise to about three-fourths of the range, which will be 185°F, and allow 15 minutes for heat-up. The pilot light will light when the well reaches the set temperature.
3. Place an OFITE #154-00 or #154-10 Thermometer in provided thermometer hole on the side of the well to read well temperature. The thermostat should be set about 50°F above desired mud temperature.
4. With the well pre-heated, place the cup of mud in the well. Stir mud frequently, checking also with a thermometer. When the mud approaches the desired temperature, cut the thermostat back about ¼ turn to avoid overheating.
5. Place entire assembly on base of OFITE Viscometer or Rheometer. The holes in the shelf of the OFITE Viscometer have been relocated to hold the cup heater at 45° to the line of the instrument for better accommodation (see picture to right).

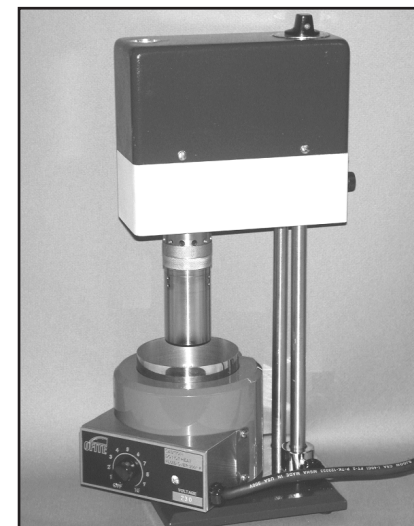

6. Raise or lower instrument to proper depth and stir. Recheck temperature and take reading. Adjustment of temperature may be needed if instrument bob and rotor are cold.